



PowerWasher System Operating Instructions

1. Place the Insert between both halves of the Swifty Line Remover.
2. Insert the SS spindle into the drill motor. Attach the assembly to the drill motor with the wing nut & washers.
3. Place the drill motor into a secure device.
4. Place fishing reel in free spool.
5. Do not run line through rod guides.
6. Tie the filament line to one of the cross bars.
7. Place drill motor in the "forward" rotation.
8. **Extreme care** must be taken not to allow your fingers to be exposed to the spinning spools.
9. Firmly hold the fishing reel while depressing drill motor trigger.
10. Remove the fishing line from the fishing reel. Use care to layer the line on the PowerWasher. Do not allow the line to build up in one location. Maintain steady line tension to ensure a quick and easy return of the cleaned line to the reel.
11. **Just before the fishing reel is empty, stop the drill motor.**
12. Cut the remaining line off the fishing reel.
13. Remove the Insert from the Line Remover.
14. Wash and dry the filament line.
15. Return the Insert to the Line Remover using the Blue shaft and collar. Place a small amount of tension on the collar to maintain pressure on the insert.
16. Return the line to the reel.
17. You now have clean filament line ready to catch that trophy fish.



Made in U.S.A.

P.O. Box 1988, Glendora California 91740
office (626) 963-1142 fax (626) 963-8672
tim@swiftymfg.com www.swiftymfg.com

Swiftly Manufacturing is dedicated to helping anglers nurture the environment by providing high quality, environmentally safe fishing products.